## Checklist for cleaning the washing maschine



## Instructions

- Before starting the programme, check if the trum can turns freely and isnt blocked by any item
- Fill up the washing and rins agent compartments
- Choose the right programme and start
- After the programme has finished and you removed and clothes, take a piece of dry cloth and dry the door rubber seal to avoid smell and mold build up
- Leave the door a bit open so the washing tumble can dry. If something is on the way and the door cannot be left open, then dry it with a soft dry cloth
- Clean the soap and bleach compartments every 2nd week
- Clean the rubber seal once a week
- Check and clean the bottom water pump filter once a month