


Nr. 3 shows the container for **dishwasher tabs you need to use every time**. It is not allowed to use regular dish soap as it makes foam – which can lead to malfunctions of the machine.

Remember: always rinse the dishes with hot water or remove most of food residues by using soft kitchen paper before placing them into the dishwasher. Do not put oily/greasy dishes or those having excess food residues into the dishwasher as they can easily clog the fine filter (nr. 1) at the bottom of the dishwasher which then it needs to be cleaned frequently.


IMPORTANT:

You need to buy **SALT for dishwasher** and fill up the container (**nr. 2**) at the bottom. Use one of the types (coarse/groft or fine/fint) shown in the pictures to the right. → → →

When the  sign lights up on the control panel, it means that the salt container is empty and it needs to be filled up.



Buy **rinse aid** (**afspændingsmiddel** in Danish) and fill the container up located on the door of the dishwasher (**nr. 4**) to get spot free dishes. To the right there are some examples about the liquid. → → →

When the  sign lights up, it means that the rinse aid container is empty and it needs to be filled up.

